

TABLE OF CONTENTS

SPECIFICATIONS	1
FIRING ORDER	2
GASOLINE REQUIREMENTS	3
ENGINE OIL RECOMMENDATIONS	3
ENGINE OIL CHANGES	3
BREAK-IN	3
ANNUAL LAY-UP	4
BEFORE LIFTING BOAT FROM WATER	4
AFTER LIFTING BOAT FROM WATER	4
ANNUAL FITTING-OUT	5
MAINTENANCE	5
OUTBOARD DRIVE SECTION	6
MODEL ²⁻⁷⁰ 250 OUTBOARD DRIVE	7,8
GENERAL DESCRIPTION	9
RUNNING INSTRUCTIONS	10
RUNNING IN SHALLOW WATER	10
WARNING DEVICE WHEN RUNNING IN REVERSE	10
TRIM OF THE BOAT	11
ADJUSTMENT OF STEERING ROD	12
ADJUSTING FOR DEVIATION FROM COURSE	12
TRAILERING	12
SERVICING	13
MAINTENANCE TABLE	13
CHECKING THE OIL	13
CHANGING THE OIL	13,14
GREASING THE STEERING BEARINGS	14
CHECKING THE ANTI-CORROSION DEVICES	15
ZINC PLUG	15
CHANGING THE PROPELLER	15
ADJUSTING THE RETAINING PAWL	16
GENERAL INSPECTION	17
PREPAIRING UNIT FOR LAY-UP	17
PROTECTIVE TREATMENT	17
PREPARING UNIT FOR USE	17
WIRING DIAGRAM, LIFT UNIT	18
COMPONENTS	18
CABLE MARKINGS	18
TECHNICAL DATA	18
ADJUSTMENT FOR CHANGE FROM L. 1 TO RH PROP.	19
INFORMATION AVAILABLE	19