


FIRING ORDER

MODEL 302-FLV — 350-FLV

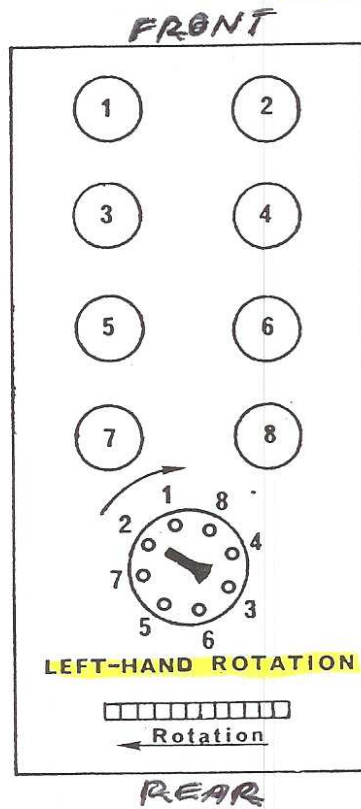

Rotation from
Outboard Drive End: Counter Clockwise

Firing Order: 1-8-4-3-6-5-7-2